


# APPLICATION NOTE

## Attaching Multiple Washers to Connector Pins

### Introduction

To populate the block with washers, rub single washers on the surface of the block, and the washers will fall in place in the counter-sink holes. Then mate the populated block with the connector and tip the block upside down so washers will transfer to the connector.

Check to make sure all washers have been released. If the washers are flux-coated, clean the block periodically to prevent sticking or hanging up of the washers in the counter-sunk holes.

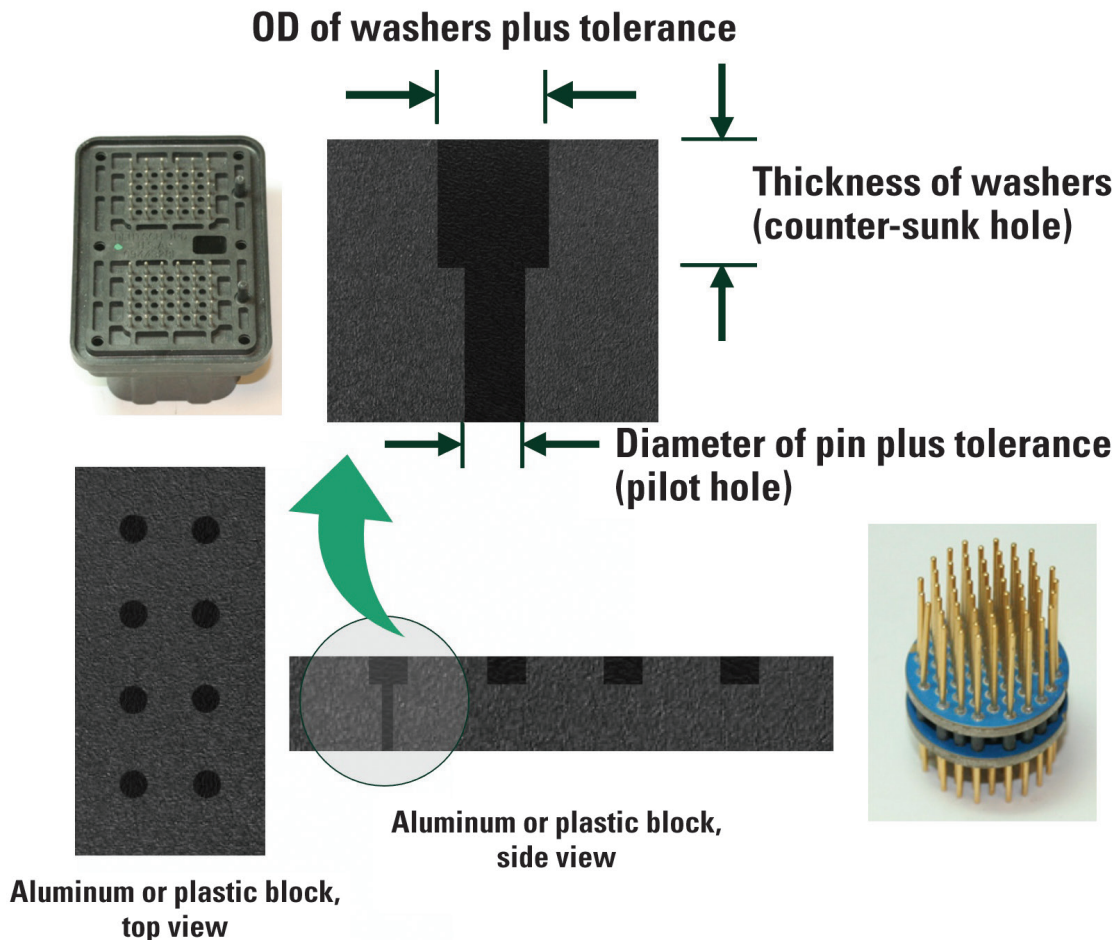

This product data sheet is provided for general information only. It is not intended, and shall not be construed, to warrant or guarantee the performance of the products described which are sold subject exclusively to written warranties and limitations thereon included in product packaging and invoices. All Indium Corporation's products and solutions are designed to be commercially available unless specifically stated otherwise.

All of Indium Corporation's solder paste and preform manufacturing facilities are IATF 16949:2016 certified. Indium Corporation is an ISO 9001:2015 registered company.

**From One Engineer To Another®**

Contact our engineers: [askus@indium.com](mailto:askus@indium.com)

Learn more: [www.indium.com](http://www.indium.com)



Form No. 100116 R1

ASIA +65 6268 8678 • CHINA +86 (0) 512 628 34900 • EUROPE +44 (0) 1908 580400 • USA +1 315 853 4900



©2024 Indium Corporation