PRODUCT DATA SHEET WS-3600 Ball-Attach Flux

Introduction

Ball-Attach Flux WS-3600 is a thixotropic flux designed for use in pin transfer applications for ball-attachment to substrates (BGA manufacturing). Its rheology is specifically designed for use with even the smallest gravity-fed spheres. **WS-3600** has an activator system powerful enough to promote wetting on the most demanding substrate metallizations. The flux is a distinctive red color, which aids automated level-sensing equipment and also enhances visual inspection.

Features

Dronortion

- Flux rheology applicable for all sphere sizes
- Suitable for Pb-free or SnPb applications
- Uniform pin transfer over extended periods
- Red color for ease of detection
- Proven high yields in ball-attach process
- Excellent solderability on a wide range of surfaces

Properties	
Value	Test Method
H1	J-STD-004 (IPC-TM-650: 2.3.32 and 2.3.33)
16kcps	Brookfield HB DVII ± CP (5rpm)
Pass (>10 ⁸ after 7 days @ 85°C and 85% RH)	J-STD-004 (IPC-TM-650: 2.6.3.3 IPC-B-24)
78mg KOH/g	Titration
275g	J-STD-005 (IPC-TM.650: 2.4.44)
5 to 25°C for 3 months or -20 to +5°C for 6 months	Viscosity change/ microscope examination
	ValueH116kcpsPass (>108 after 7 days @ 85°C and 85% RH)78mg KOH/g275g5 to 25°C for 3 months or


All information is for reference only.


Not to be used as incoming product specifications.

Application


The amount of flux deposited on the substrate can be optimized by changing equipment parameters. Key variables include pin shape, pin diameter, shear speed, dwell, and depth of immersion. The flux rheology can be optimized for the desired application by shearing to achieve the desired viscosity.

From One Engineer To Another[®]

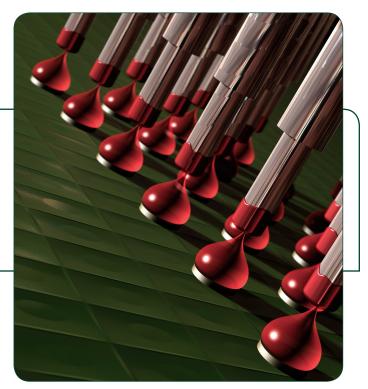

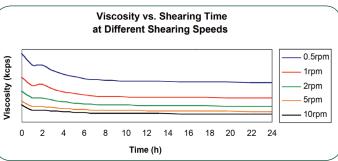

Comparative Solder Wetting Capability

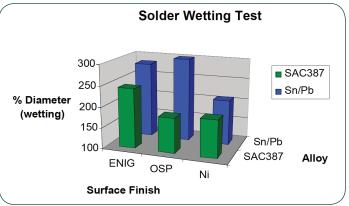



PRODUCT DATA SHEET WS-3600 Ball-Attach Flux

Cleaning

WS-3600 residue can be cleaned with DI water, or water with an added cleaner. Ideal conditions for spray-cleaning: 25°C (room temperature) or higher for >1 minute at >60psi.

Packaging

WS-3600 is available in 10–150g syringes and in 100g jars or cartridges. Other packaging can be provided to meet the customer's specific requirements.



Storage


For maximum shelf life, **WS-3600** syringes and cartridges should be stored tip down at -20 to +5°C. After removing from cold storage, **WS-3600** should be allowed to stand for at least 4 hours at room temperature before using.

Technical Support

Indium Corporation sets the industry standard in providing rapid response, onsite technical support for our customers worldwide. Indium Corporation's team of Technical Support Engineers can provide expertise in all aspects of Materials Science and Semiconductor Packaging process applications.

Reflow

Recommended Profile:

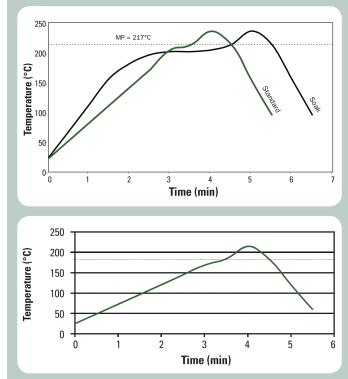

Peak reflow temperature should be $<350^{\circ}$ C in an air or nitrogen atmosphere (<500ppm O₂), with a linear ramp up to 30°C above liquidus temperature. These profiles are recommended to the user as starting points, and should be optimized by the user to meet their individual process needs.

Safety Data Sheets

The SDS for this product can be found online at http://www.indium.com/sds



This product data sheet is provided for general information only. It is not intended, and shall not be construed, to warrant or guarantee the performance of the products described which are sold subject exclusively to written warranties and limitations thereon included in product packaging and invoices. All Indium Corporation's products and solutions are designed to be commercially available unless specifically stated otherwise.

Contact our engineers today: askus@indium.com Learn more: www.indium.com



ASIA +65 6268 8678 • CHINA +86 (0) 512 628 34900 • EUROPE +44 (0) 1908 580400 • USA +1 315 853 4900

©2018 Indium Corporation